

WIDE RANGE

Several versions are available, designed to face all timber construction needs. The LBV plates can create simple beam and joist joints through to the most important inter-story connections.

READY FOR USE

An "off the shelf solution" that meets the most common requirements and minimises installation times. It offers an excellent cost to performance ratio.


EFFICIENCY

The new LBA nails have been tested according to ASTM F1575 for bending yield strength and ASTM D1761-20 for withdrawal resistance, delivering outstanding strength with a reduced number of fasteners.



CANADIAN DESIGN VALUES

USA, EU and more design values available online.

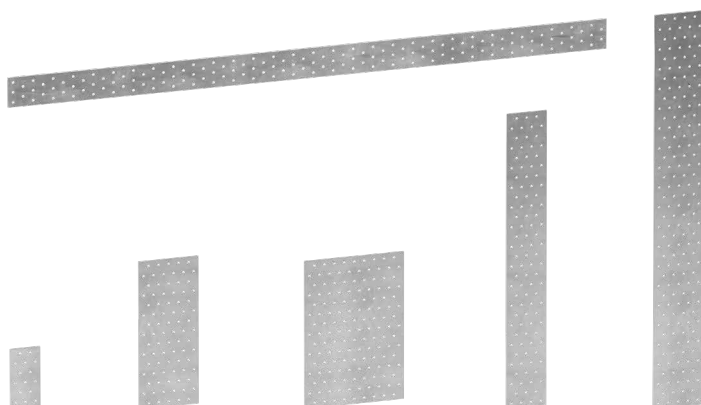

SERVICE CONDITION



MATERIAL




S250GD + Z275 carbon steel

THICKNESS [mm]

1,5 mm | 2,0 mm

EXTERNAL LOADS

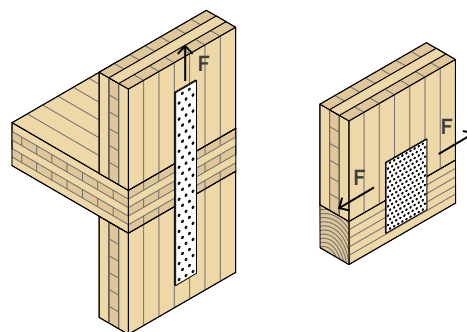

FIELD OF USE

Tension joints with small to medium stresses through a simple and cost-effective solution. Timber-to-timber configuration.


Can be applied to:

- solid timber and glulam
- timber frame
- CLT and LVL panels

CODES AND DIMENSIONS

LBV 1,5 mm


CODE	B	H	s	B	H	s	n Ø5 n Ø0.20 [pcs]		pcs
	[mm]	[mm]	[mm]	[in]	[in]	[in]			
LBV60600	60	600	1,5	2 3/8	23 5/8	0.06	75	●	10
LBV60800	60	800	1,5	2 3/8	31 1/2	0.06	100	●	10
LBV80600	80	600	1,5	3 1/8	23 5/8	0.06	105	●	10
LBV80800	80	800	1,5	3 1/8	31 1/2	0.06	140	●	10
LBV100800	100	800	1,5	4	31 1/2	0.06	180	●	10

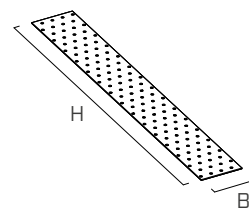

S250
2275

LBV 2,0 mm


CODE	B	H	s	B	H	s	n Ø5 n Ø0.20 [pcs]		pcs
	[mm]	[mm]	[mm]	[in]	[in]	[in]			
LBV40120	40	120	2,0	1 9/16	4 3/4	0.08	9	●	200
LBV40160	40	160	2,0	1 9/16	6 1/4	0.08	12	●	50
LBV60140	60	140	2,0	2 3/8	5 1/2	0.08	18	●	50
LBV60200	60	200	2,0	2 3/8	8	0.08	25	●	100
LBV60240	60	240	2,0	2 3/8	9 1/2	0.08	30	●	100
LBV80200	80	200	2,0	3 1/8	8	0.08	35	●	50
LBV80240	80	240	2,0	3 1/8	9 1/2	0.08	42	●	50
LBV80300	80	300	2,0	3 1/8	11 3/4	0.08	53	●	50
LBV100140	100	140	2,0	4	5 1/2	0.08	32	●	50
LBV100200	100	200	2,0	4	8	0.08	45	●	50
LBV100240	100	240	2,0	4	9 1/2	0.08	54	●	50
LBV100300	100	300	2,0	4	11 3/4	0.08	68	●	50
LBV100400	100	400	2,0	4	15 3/4	0.08	90	●	20
LBV100500	100	500	2,0	4	19 3/4	0.08	112	●	20
LBV120200	120	200	2,0	4 3/4	8	0.08	55	●	50
LBV120240	120	240	2,0	4 3/4	9 1/2	0.08	66	●	50
LBV120300	120	300	2,0	4 3/4	11 3/4	0.08	83	●	50
LBV140400	140	400	2,0	5 1/2	15 3/4	0.08	130	●	15
LBV160400	160	400	2,0	6 1/4	15 3/4	0.08	150	●	15
LBV200300	200	300	2,0	8	11 3/4	0.08	142	●	15

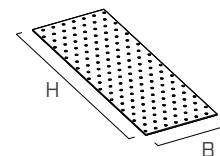

S250
2275


LBV 2,0 x 1200 mm

CODE	B	H	s	B	H	s	n Ø5 n Ø0.20 [pcs]		pcs
	[mm]	[mm]	[mm]	[in]	[in]	[in]			
LBV401200	40	1200	2,0	1 9/16	47 1/4	0.08	90	●	20
LBV601200	60	1200	2,0	2 3/8	47 1/4	0.08	150	●	20
LBV801200	80	1200	2,0	3 1/8	47 1/4	0.08	210	●	20
LBV1001200	100	1200	2,0	4	47 1/4	0.08	270	●	10
LBV1201200	120	1200	2,0	4 3/4	47 1/4	0.08	330	●	10
LBV1401200	140	1200	2,0	5 1/2	47 1/4	0.08	390	●	10
LBV1601200	160	1200	2,0	6 1/4	47 1/4	0.08	450	●	10
LBV1801200	180	1200	2,0	7 1/8	47 1/4	0.08	510	●	10
LBV2001200	200	1200	2,0	8	47 1/4	0.08	570	●	5
LBV2201200	220	1200	2,0	8 5/8	47 1/4	0.08	630	●	5
LBV2401200	240	1200	2,0	9 1/2	47 1/4	0.08	690	●	5
LBV2601200	260	1200	2,0	10 1/4	47 1/4	0.08	750	●	5
LBV2801200	280	1200	2,0	11	47 1/4	0.08	810	●	5
LBV3001200	300	1200	2,0	11 3/4	47 1/4	0.08	870	●	5
LBV4001200	400	1200	2,0	15 3/4	47 1/4	0.08	1170	●	5

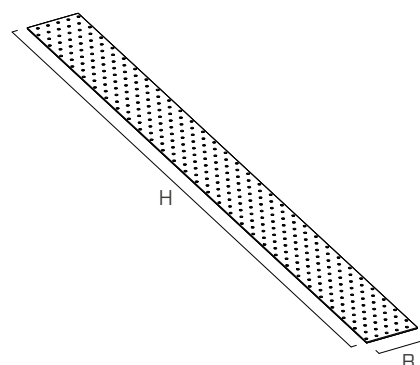


S250
2275

FASTENERS

type	description		d [mm]	support	page
LBA	high bond nail		4		570
LBS	round head screw		5		571


GEOMETRY

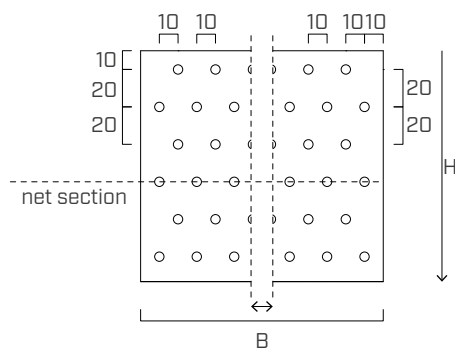

B	net area holes	B	net area holes	B	net area holes
[mm]	pcs	[mm]	[pcs]	[mm]	[pcs]
40	2	140	7	240	12
60	3	160	8	260	13
80	4	180	9	280	14
100	5	200	10	300	15
120	6	220	11	400	20

INSTALLATION

MINIMUM DISTANCES

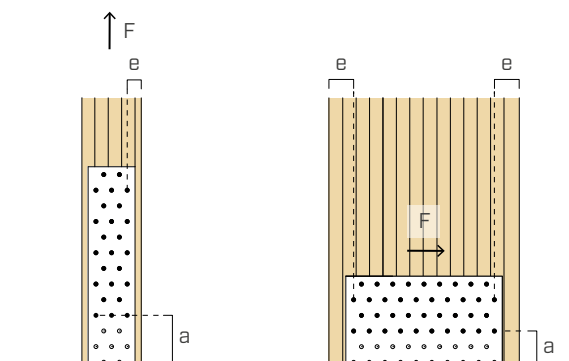

Spruce-Pine-Fir and Northern Species		nail LBA Ø4	screw LBS Ø5
edge distance perpendicular to grain	e [mm]	≥ 16	≥ 20
end distance parallel to grain	a [mm]	≥ 48	≥ 60
Douglas Fir-Larch, Hem-Fir, and Western Red Cedar		nail LBA Ø4	screw LBS Ø5
edge distance perpendicular to grain	e [mm]	≥ 20	≥ 25
end distance parallel to grain	a [mm]	≥ 60	≥ 75

STRUCTURAL VALUES | TIMBER-TO-TIMBER | F

STRENGTH OF THE SYSTEM

The tensile strength of the system (T_r) is the minimum between the $T_{r,steel}$ plate side tensile strength and the shear resistance of the connectors used for fastening $n_F \cdot N_r$.
If the connectors are placed in several consecutive rows and the load direction is parallel to the grain, the following design criteria must be applied.

$$T_r = \min \left\{ \begin{array}{l} T_{r,steel} \\ \Sigma (n_{Ri} \cdot n_{Ci} \cdot N_r) \end{array} \right.$$

Where n_{Ri} is the number of fastener rows parallel to the grain, and n_{Ci} is the number of fasteners in each row.

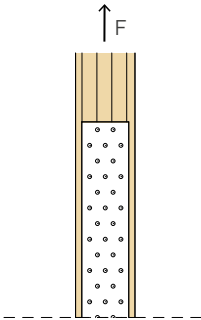


PLATE - TENSILE STRENGTH

type	B [mm]	s [mm]	net area holes [pcs]	factored tensile resistance
				$T_{r,steel}$ [kN]
LBV 1,5 mm	60	1,5	3	12,3
	80	1,5	4	16,4
	100	1,5	5	20,5
LBV 2,0 mm	40	2,0	2	9,7
	60	2,0	3	16,4
	80	2,0	4	21,9
	100	2,0	5	27,3
	120	2,0	6	32,8
	140	2,0	7	38,3
	160	2,0	8	43,8
	180	2,0	9	49,2
	200	2,0	10	54,7
	220	2,0	11	60,2
	240	2,0	12	65,6
	260	2,0	13	71,1
	280	2,0	14	76,6
	300	2,0	15	82,0
	400	2,0	20	109,4

CALCULATION EXAMPLE | TIMBER-TO-TIMBER JOINT

An example of the connection calculation can be found in the Canadian technical datasheet for LBB.

GENERAL PRINCIPLES

- The LBV plate is assumed to have a minimum specified yield strength (F_y) of 250 MPa and a minimum specified tensile strength (F_u) of 330 MPa.
- The factored tensile resistance of the steel is determined based on the tensile capacity of the governing net area of the steel plate.
- Dimensioning and verification of the timber elements must be carried out separately.
- It is recommended to place the connectors symmetrically with respect to the load direction.
- Minimum distances as per CSA-O86 2024 Clause 12.9.2.1.